
IP65 Mid Infrared Heater

Safety Instructions and Operation Manual

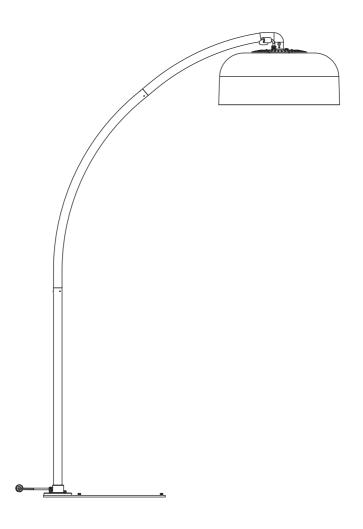







- This heater can be used by children aged 8 and above and vulnerable people provided they are under supervision or instructions detailing how to use the heater in a safe way while understanding the hazards involved. children must not play with the heater. Cleaning and maintenance must not be completed by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer or a qualified electrician.
- This product can become very hot and cause burns. Particular attention must be given whenever children and vulnerable people are present.
- Never position the heater beneath a plug socket.
- Never operate the heater within the vicinity of curtains or other combustible materials.
- Do not use this heater with a programmer, timer, separate remote control system, or any other device that switches the heater on automatically.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.

Brief Introduction

This heater is an IP65 rated remote operated infrared heater. it has almost an unlimited amount of outdoor uses, like smoking areas, courtyards, gardens etc. This patio heater is energy efficient, convenient and environmentally friendly.

Please read this manual before operating the heater.

Warning

Never store or use any flammable vapours or liquids in the vicinity of a heater. Remove the black styrofoam inserts from the heating elements before powering the heater on. Failure to do so may cause damage and may cause a fire.

Important Safety Instructions

When using electrical appliances, always follow basic safety precautions to reduce the risk of fire, electric shock or injury. Read all the following instructions before using this heater:

 This heater is hot when in use. To avoid burns, do not touch it with bare skin while in use. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes and curtains at least 0.9m away from the heater.

- Take extreme caution when the heater is left powered on unattended and whenever using the heater in the presence of children or vulnerable people.
- Always unplug the heater when not in use.
- Do not run the cord under any carpeting. Do not cover the cord with throw rugs, runners or similar coverings. Do not leave the cord under any furniture or appliances. Position the cord away from busy areas to prevent tripping over.
- Only plug the heater into properly grounded outlets.
- To disconnect the heater, turn the socket off before removing the plug.
- Do not block any ventilation. Do not use on soft surfaces, like a bed, where openings may become blocked, this may cause a fire, an electric shock or damage.
- Do not insert or allow foreign objects to enter any ventilation or exhaust openings.
- Do not place any naked flame sources (lit candles etc.) on the heater.
- Do not use the heater in areas where gasoline, paint, or flammable liquids are present.
- Only use the heater as established here. Actions not recommended may result in fire, electric shock or injury.
- Always plug the heater into a wall outlet/receptacle directly. Never use an extension cord or relocatable power tap (outlet/power strip.)
- Check if the voltage indicated on the nameplate corresponds with the local mains voltage before connecting the heater.
- The heater must never be placed directly below a mains socket.
- The casing and the front cover of the appliance become extremely hot during operation. Ensure that no combustible materials cover or obstruct the heater, whether due to wind or any other influences (such as curtains, marquees, flags, plastic foil etc.)
- In the event of improper use, there is a risk of electrical shock and/or a fire hazard. Turn the heater off immediately. Do not try to repair the heater by yourself. Please contact a suitably qualified electrician.
- Unplug the heater from the socket and wait until it has cooled suitably before cleaning.




Covering the heater is strictly prohibited.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


Specifications

| Name | Solstice |
|-------------|-------------------|
| Voltage (V) | 220-240Vj 50/60Hz |
| Power (W) | 2500W |
| IP Rating | IP65 |

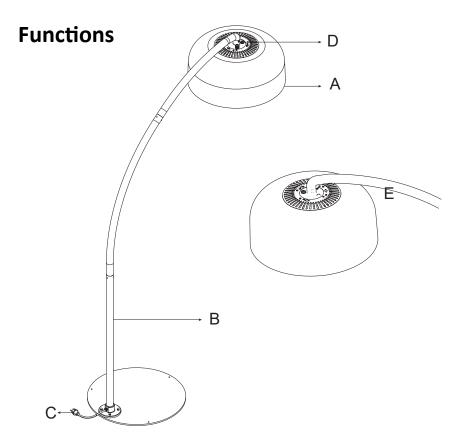

| | Name | Function |
|---|----------------|---|
| Α | Heating Module | Heating |
| В | Heater Stand | Holds the heating module firmly in place |
| С | Plug | Connects the heater to power |
| D | Switch | Turns the heater On/Off |
| E | Reset Button | While turned on, hold the reset button for 5 seconds to reset the bluetooth connection. While turned off, hold down the reset button for 5 seconds to re-calibrate the controller to the heater. |

Remote Control Instructions

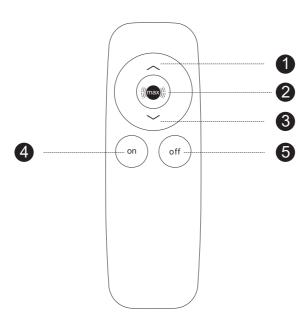

| Button | Feature |
|--------------|---|
| 1 Up Arrow | Increases the heat output by one level |
| 2 Max | The maximum heat output |
| 3 Down Arrow | Decreases the heat output by one level |
| 4 On | Turns the heater on at 33% power. After 4 seconds, it will automatically switch to the most recent temperature setting. When turned on for the first time, it will default to 100% power after 4 seconds. |
| 6 Off | To switch the heater off: Press the off button. The heater will switch to standby mode (the receiver indicator will light up). |

Introduction



 The controller takes 2 AAA 1.5V batteries. Remove the batteries when not using the heater for an extended period of time.

Operation Instructions

- Remove all packaging and remove all parts. Check all parts for damage.
- Connect the poles highlighted in Figure 1 and fit them together with the screws provided.
- Connect the poles highlighted in **Figure 2** and tighter these together.
- Connect the poles to the base as shown in **Figure 3**.
- Fix the base to the ground with expansion screws as shown in Figure 4.
- Connect the heating element to the assembled stand, as shown in Figure 5.
- Turn on the power to operate the heater.

- Ensure the heater is installed in a suitable location and that all fixings are stable enough for long-term use.
- Ensure the heater is not exposed to excessive winds.
- Check all fixings regularly. Weathering could cause them to loosen.
- Turn the heater on for 15 minutes to ensure it is working as intended.
- Unplug the heater when not in use for an extended period.

Figure 1

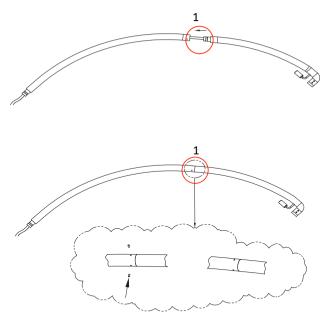


Figure 2

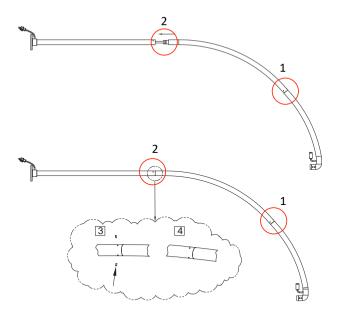


Figure 3

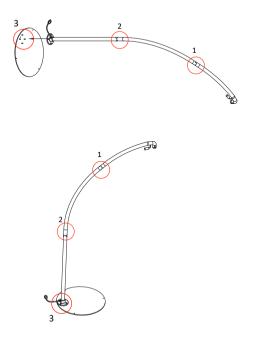
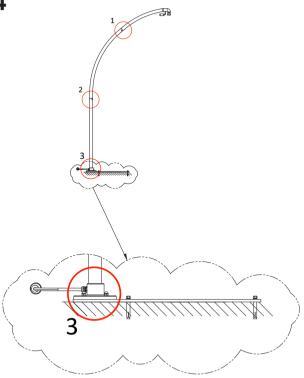


Figure 4




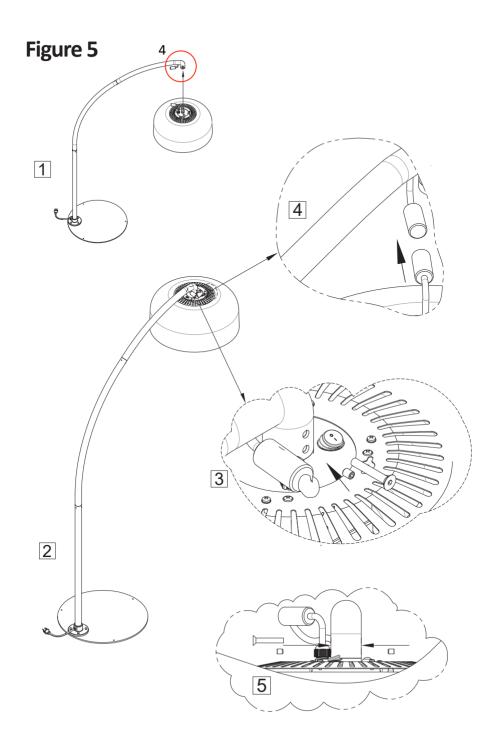


Figure 6

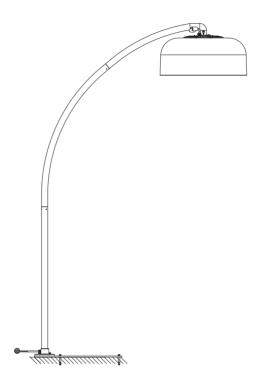

Cleaning and Maintenance

- This appliance has a robust, maintenance-free aluminium casing with a protective toughened glass cover. There are no serviceable parts.
- Before cleaning, remove the plug from the power outlet and wait until the heater has sufficiently cooled.
- Only wipe the heater with a clean lint-free cloth or a soft brush.
- Never user abrasive cleaners, scrubbing brushes or chemical cleaners to clean the heater.
- Alcohol cleaners are suitable for cleaning the heater.
- To protect against electrical shock and danger of life, do not immerse any part of the heater in any liquids.
- For any other service, please contact a suitable qualified electrician.

Disposal



This symbol indicates this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Customer Service

- Repairs must be performed by an authorised specialist, please contact suitably qualified electrician.
- Improper repairs could lead to potential danger.
- Your warranty does not cover damage or failure resulting from alteration, accident, misuse, abuse, neglect, commercial use or improper maintenance.
 In line with our policy of continuous product development we reserve the right to change the product and documentation specifications without notice.